

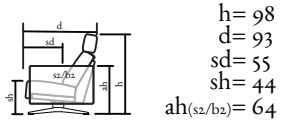


You will need 11 cm distance behind the sofa for the Stressless reclining function.

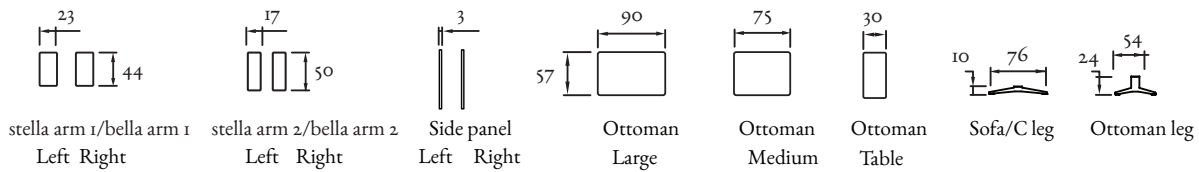


You will need 19 cm distance behind the sofa with headrest for the Stressless reclining function.


Standard components

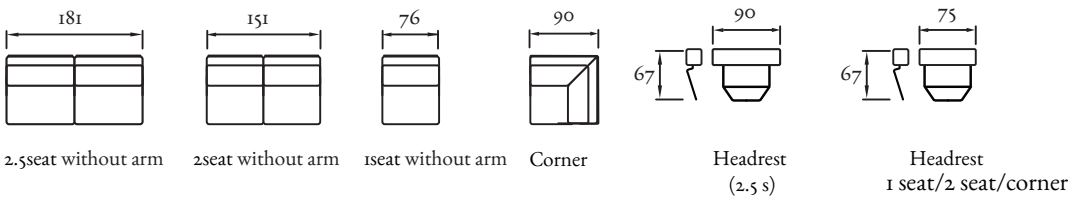

Standard sofas

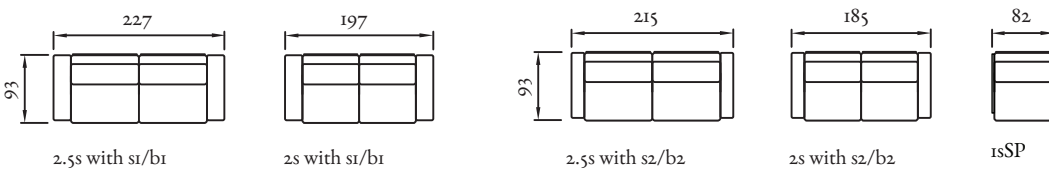

Standard samples

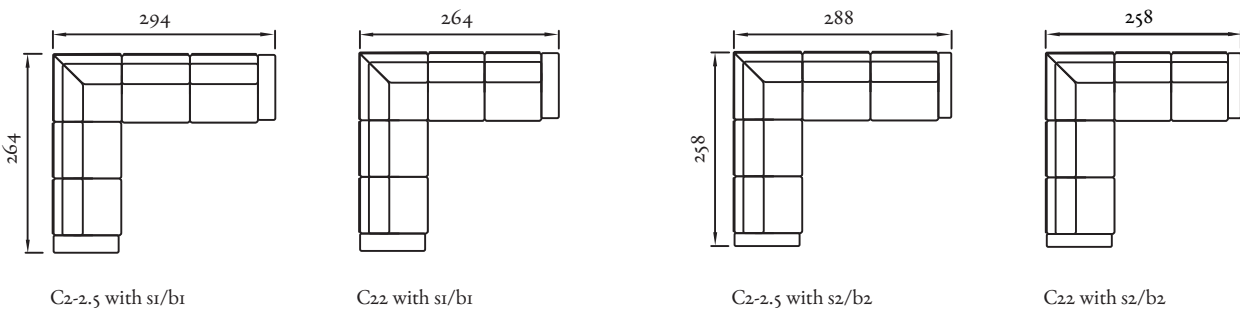

All corner configurations are reversible.

All measurements are in cm.